ASSEMBLY INSTRUCTIONS

Stowe

T4 STOWE

A	B	C	D	E	F	G	H	
								
9 PIECES	9 PIECES	5 PIECES	6 PIECES	6 PIECES	8 PIECES	1 PIECE	1 PIECE	

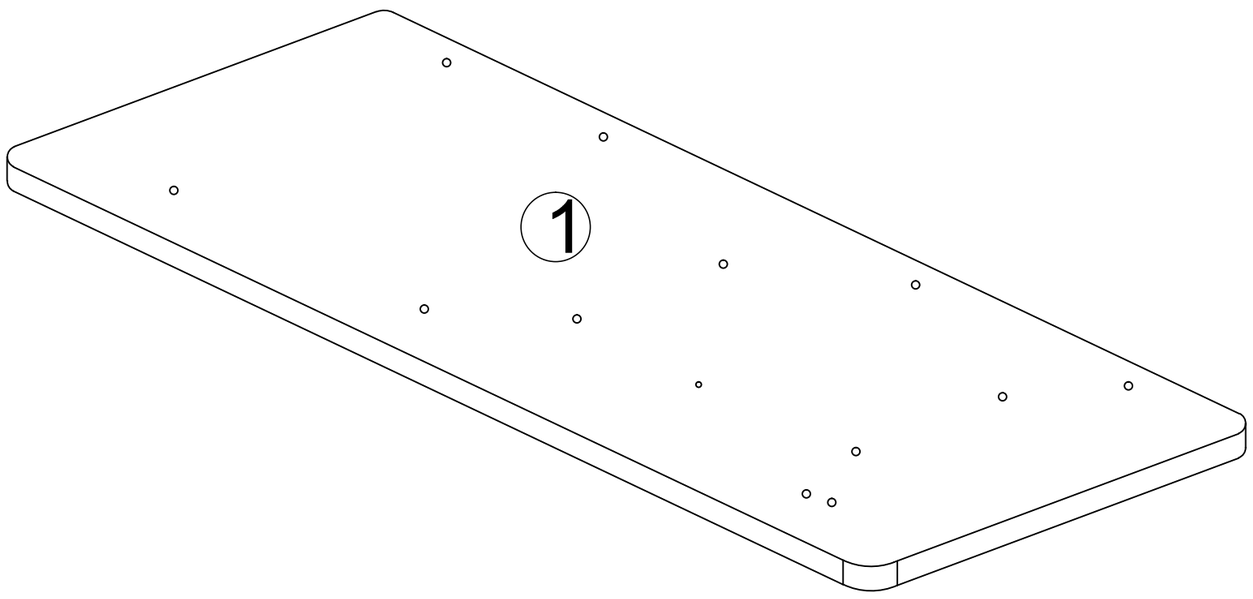

X1

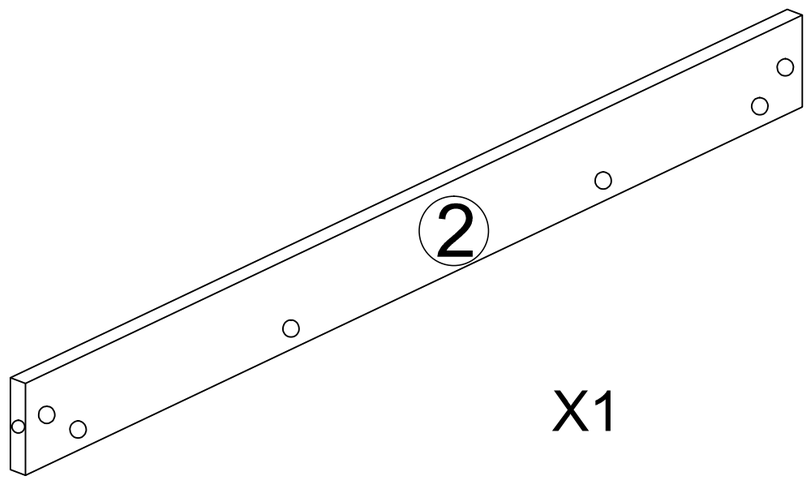

X1

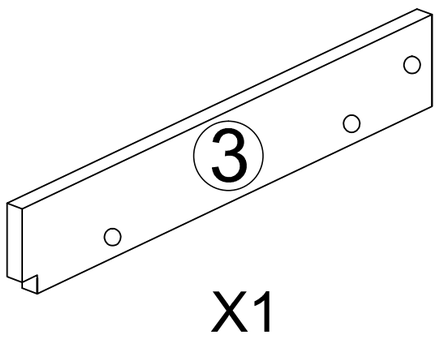

X1

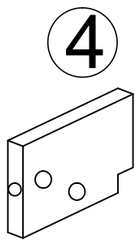

X1

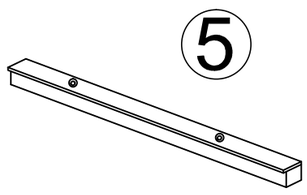

X2

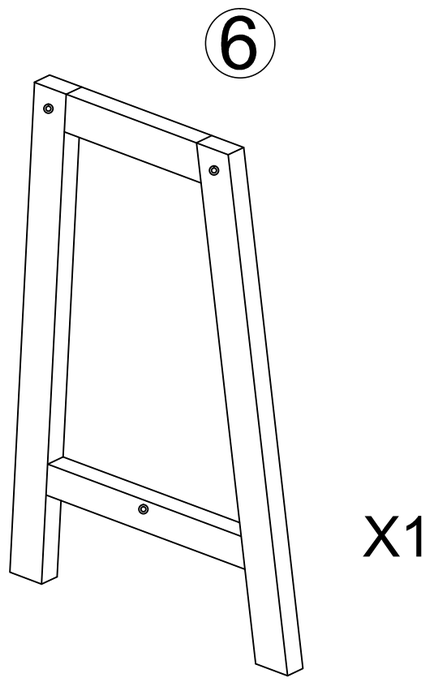

X1

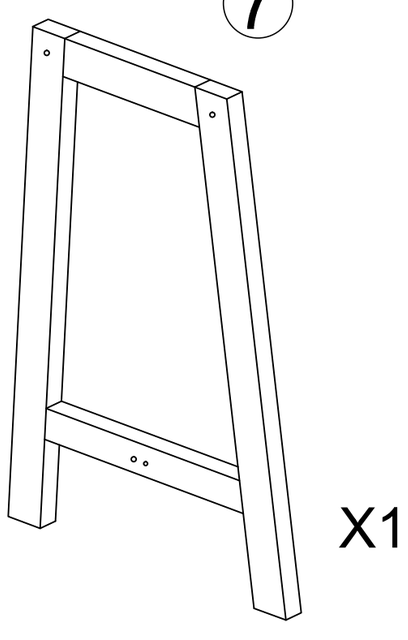

X1

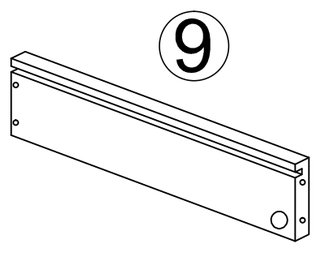

X1

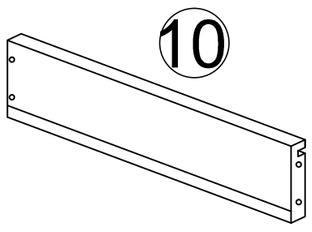

X1

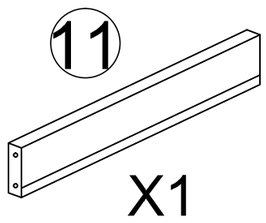

X1

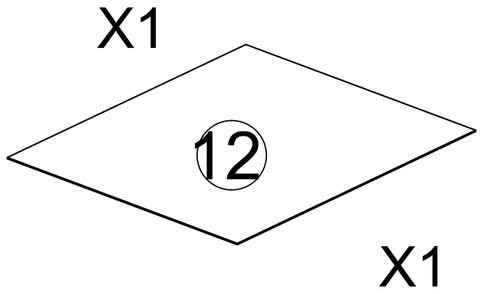

X1

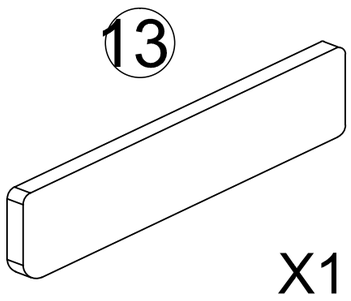

X1

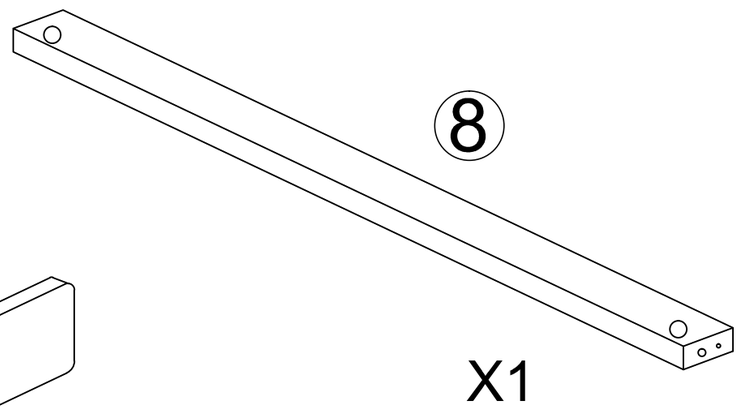

X1

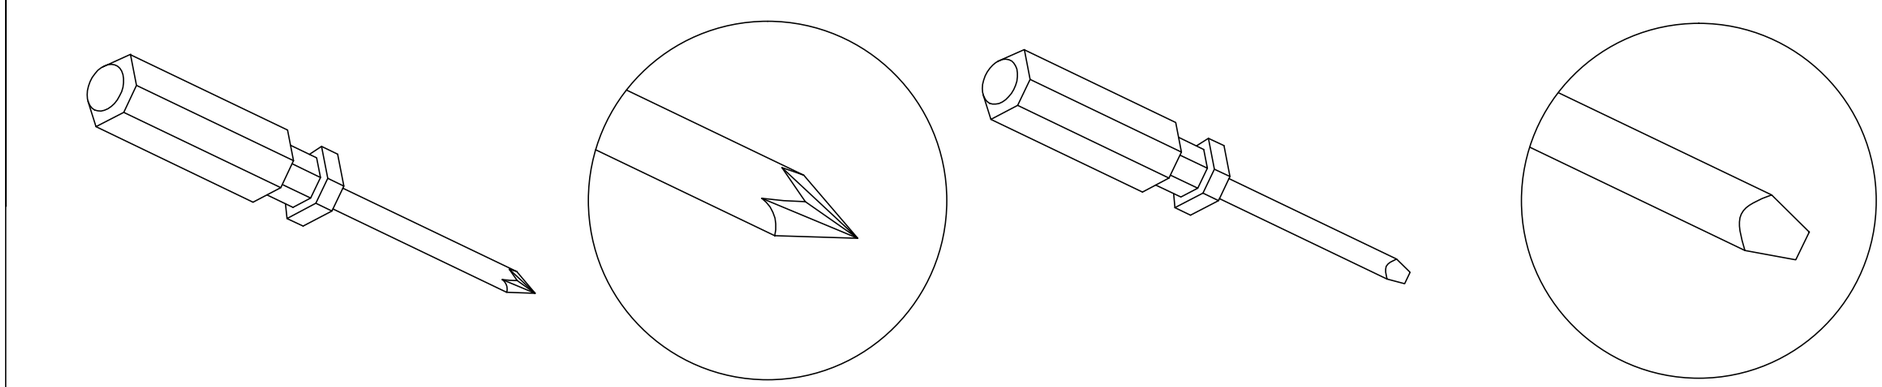

*** Cross head Screwdriver also required assembly**

1.

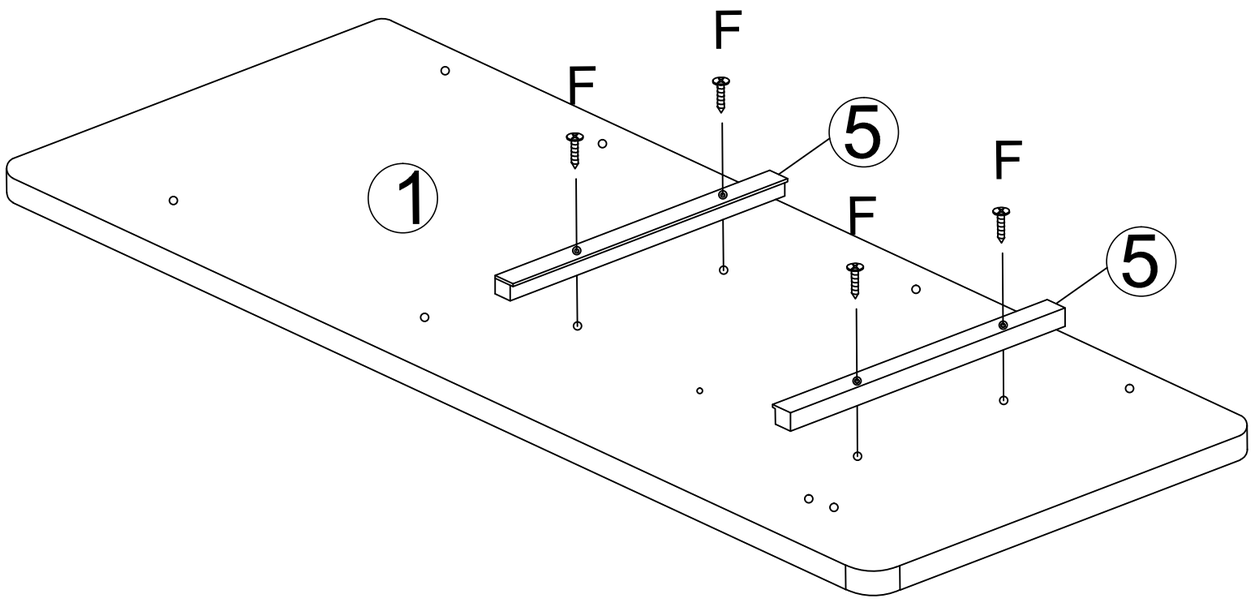

2.

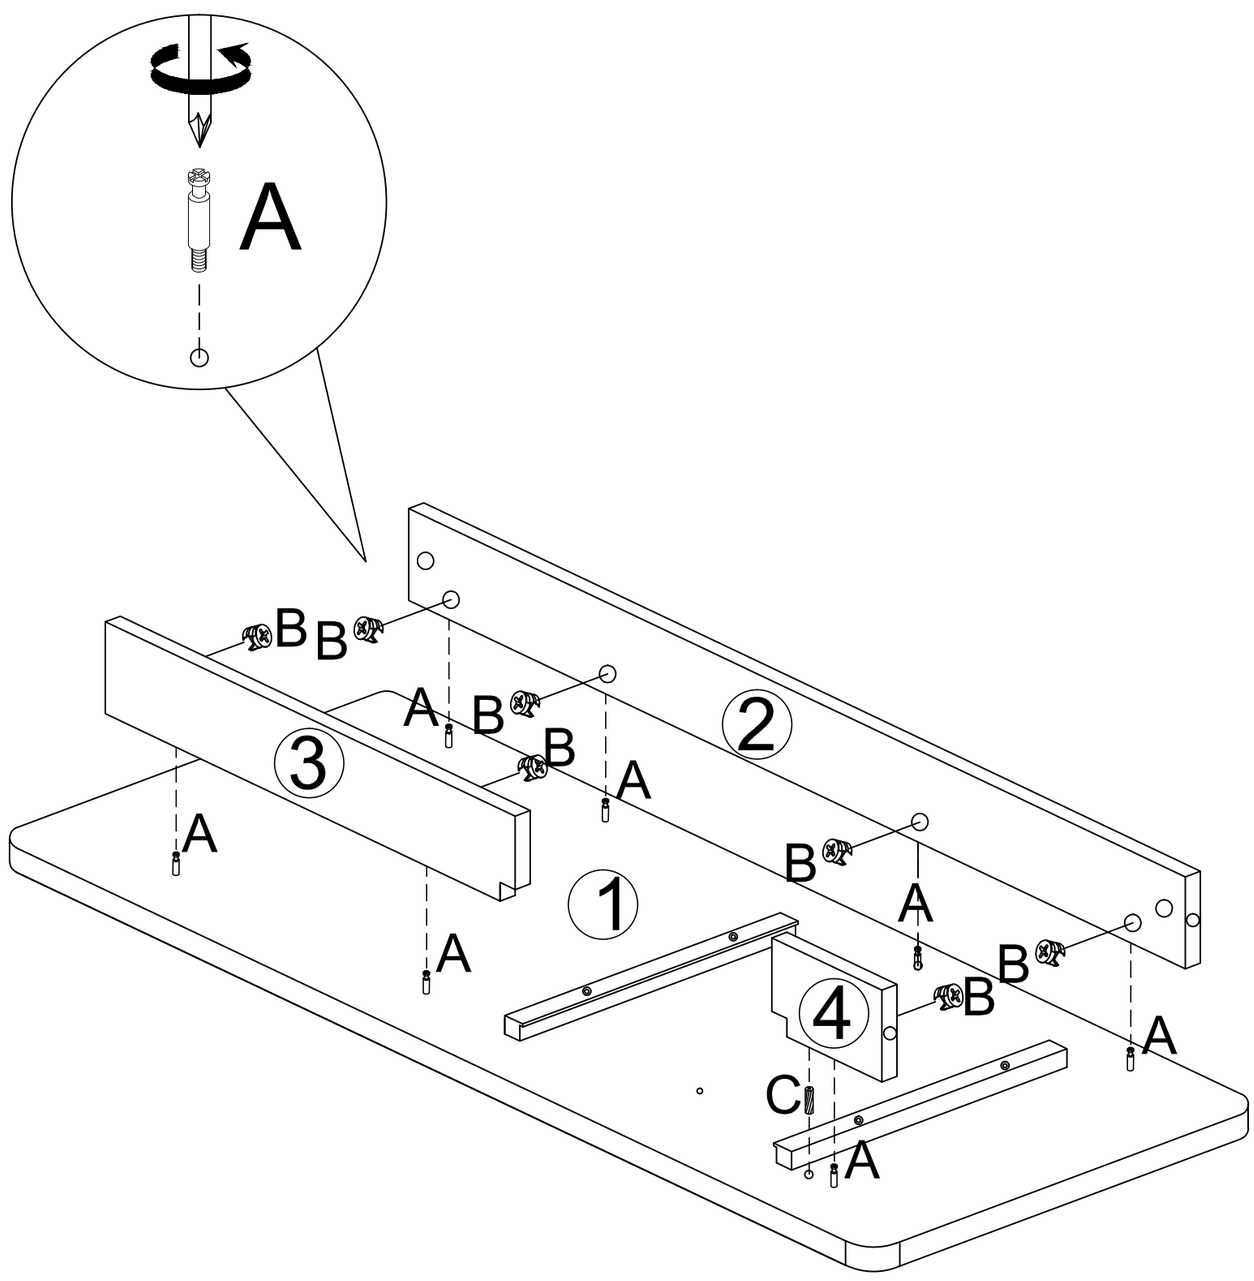

3.

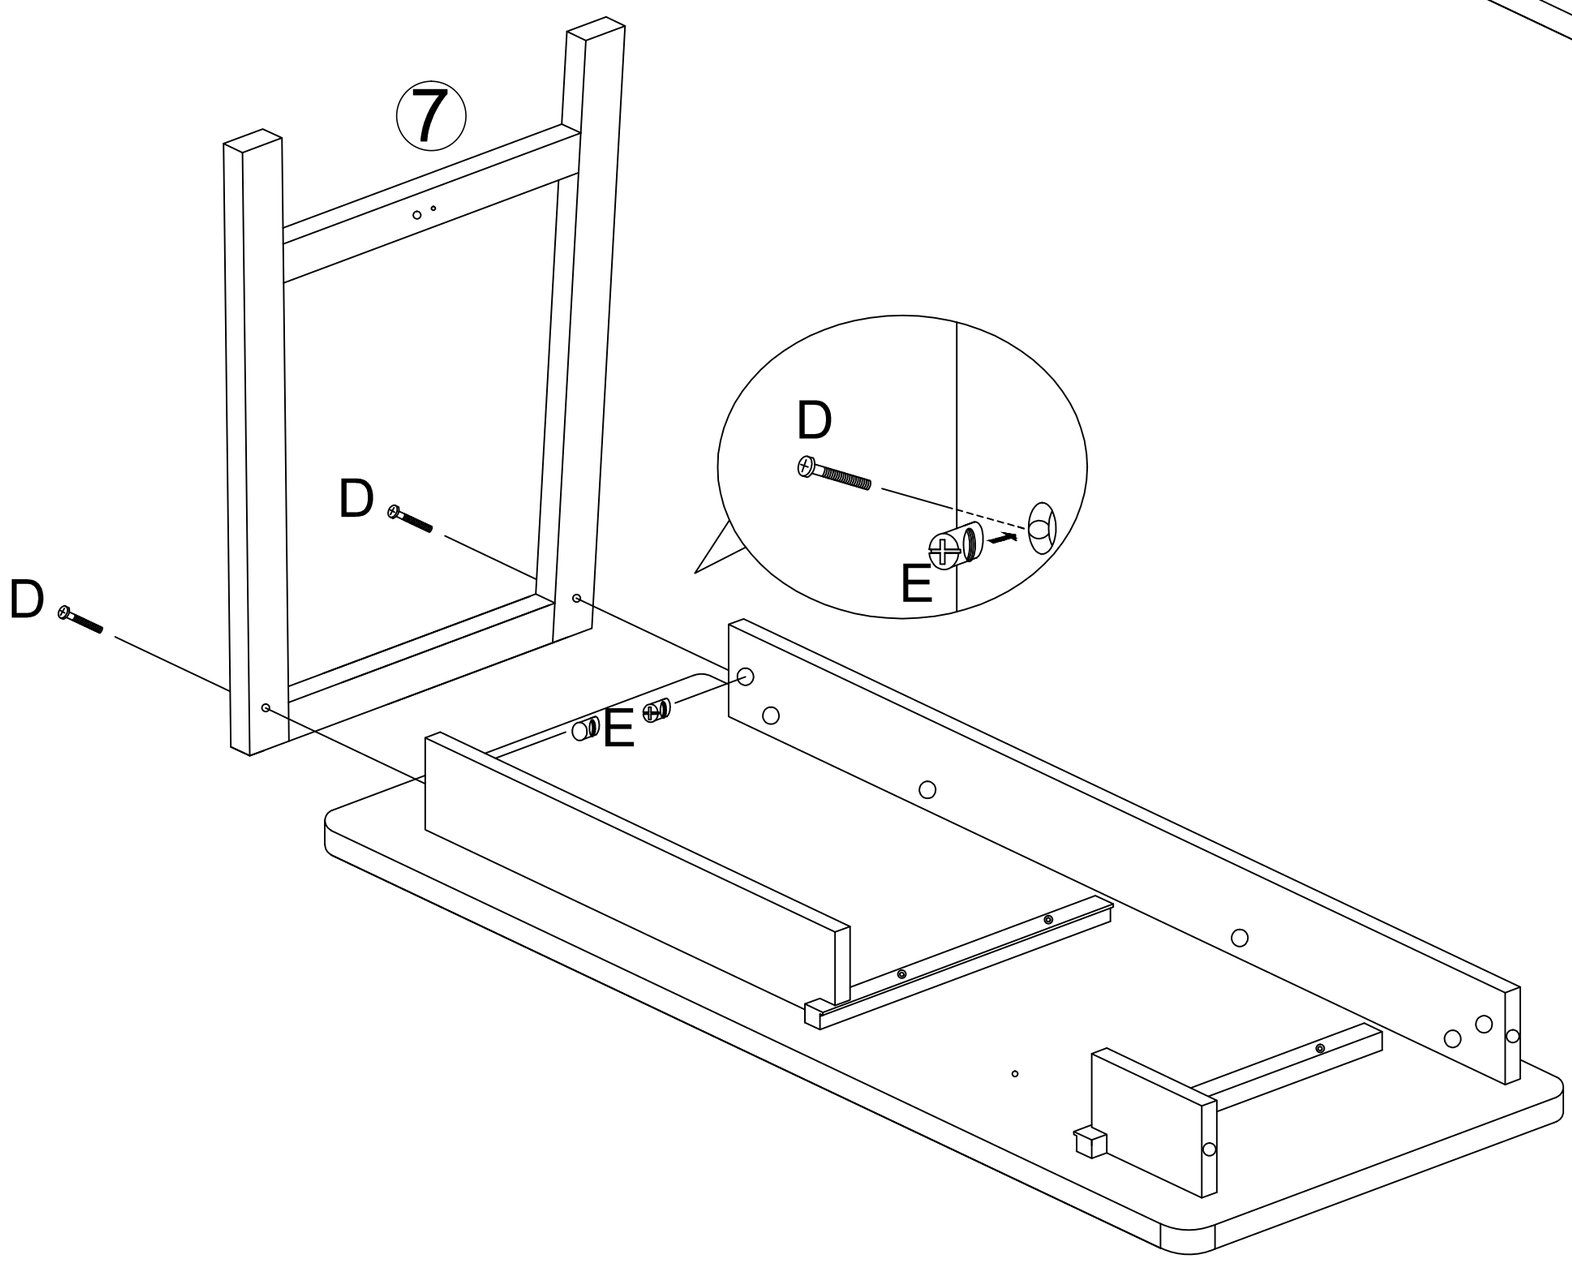

4.

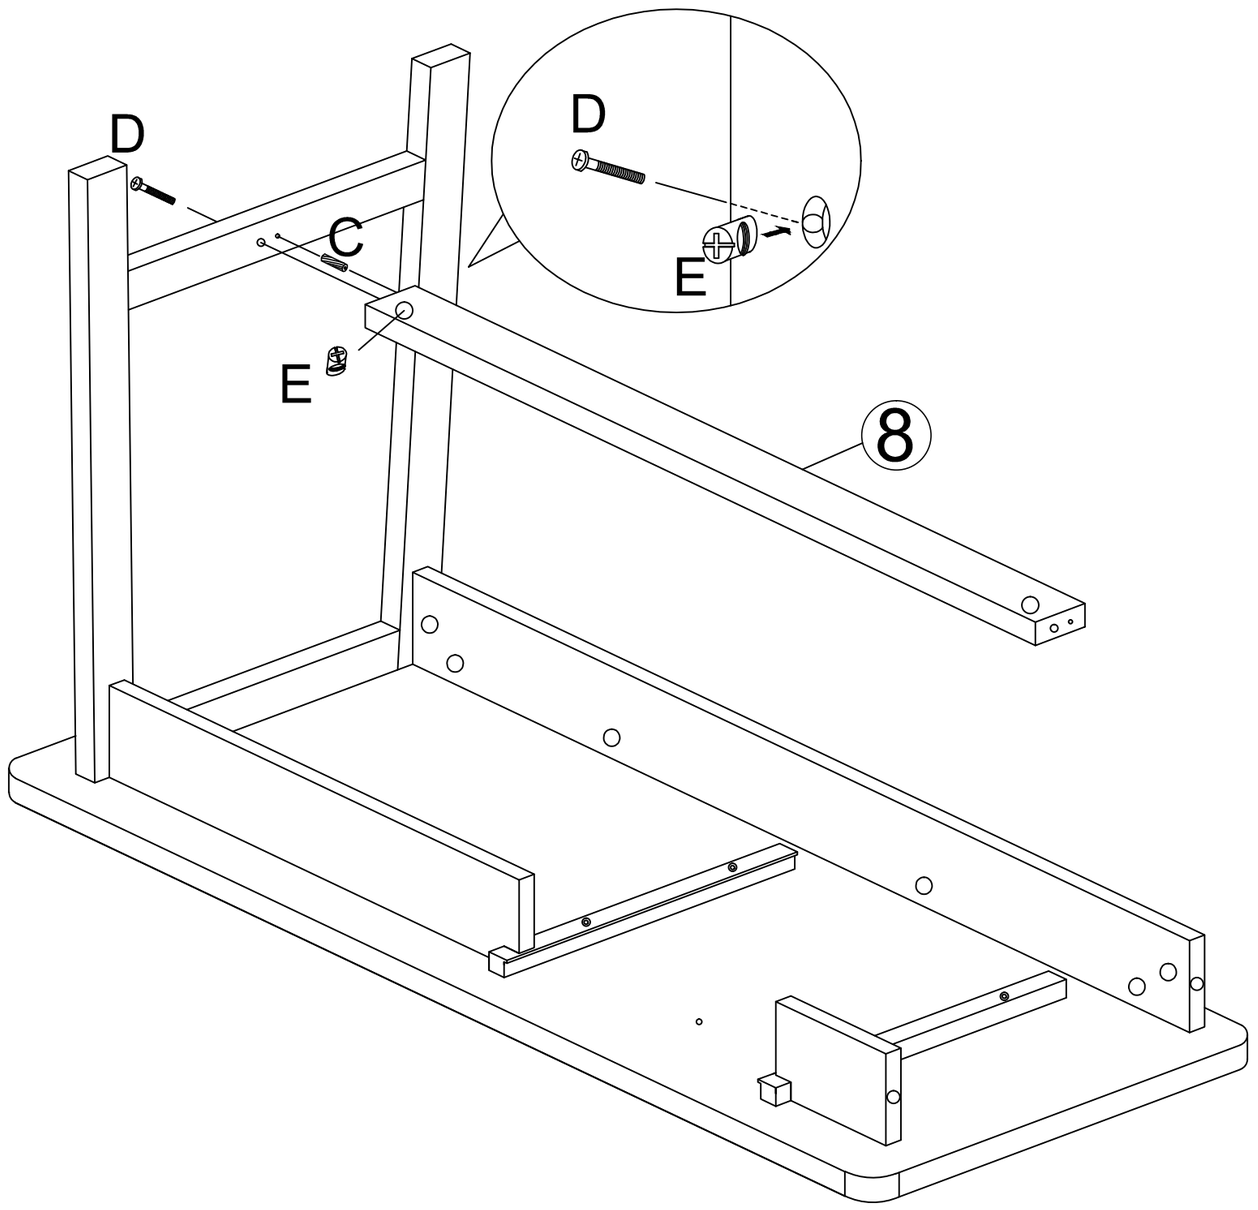

5.

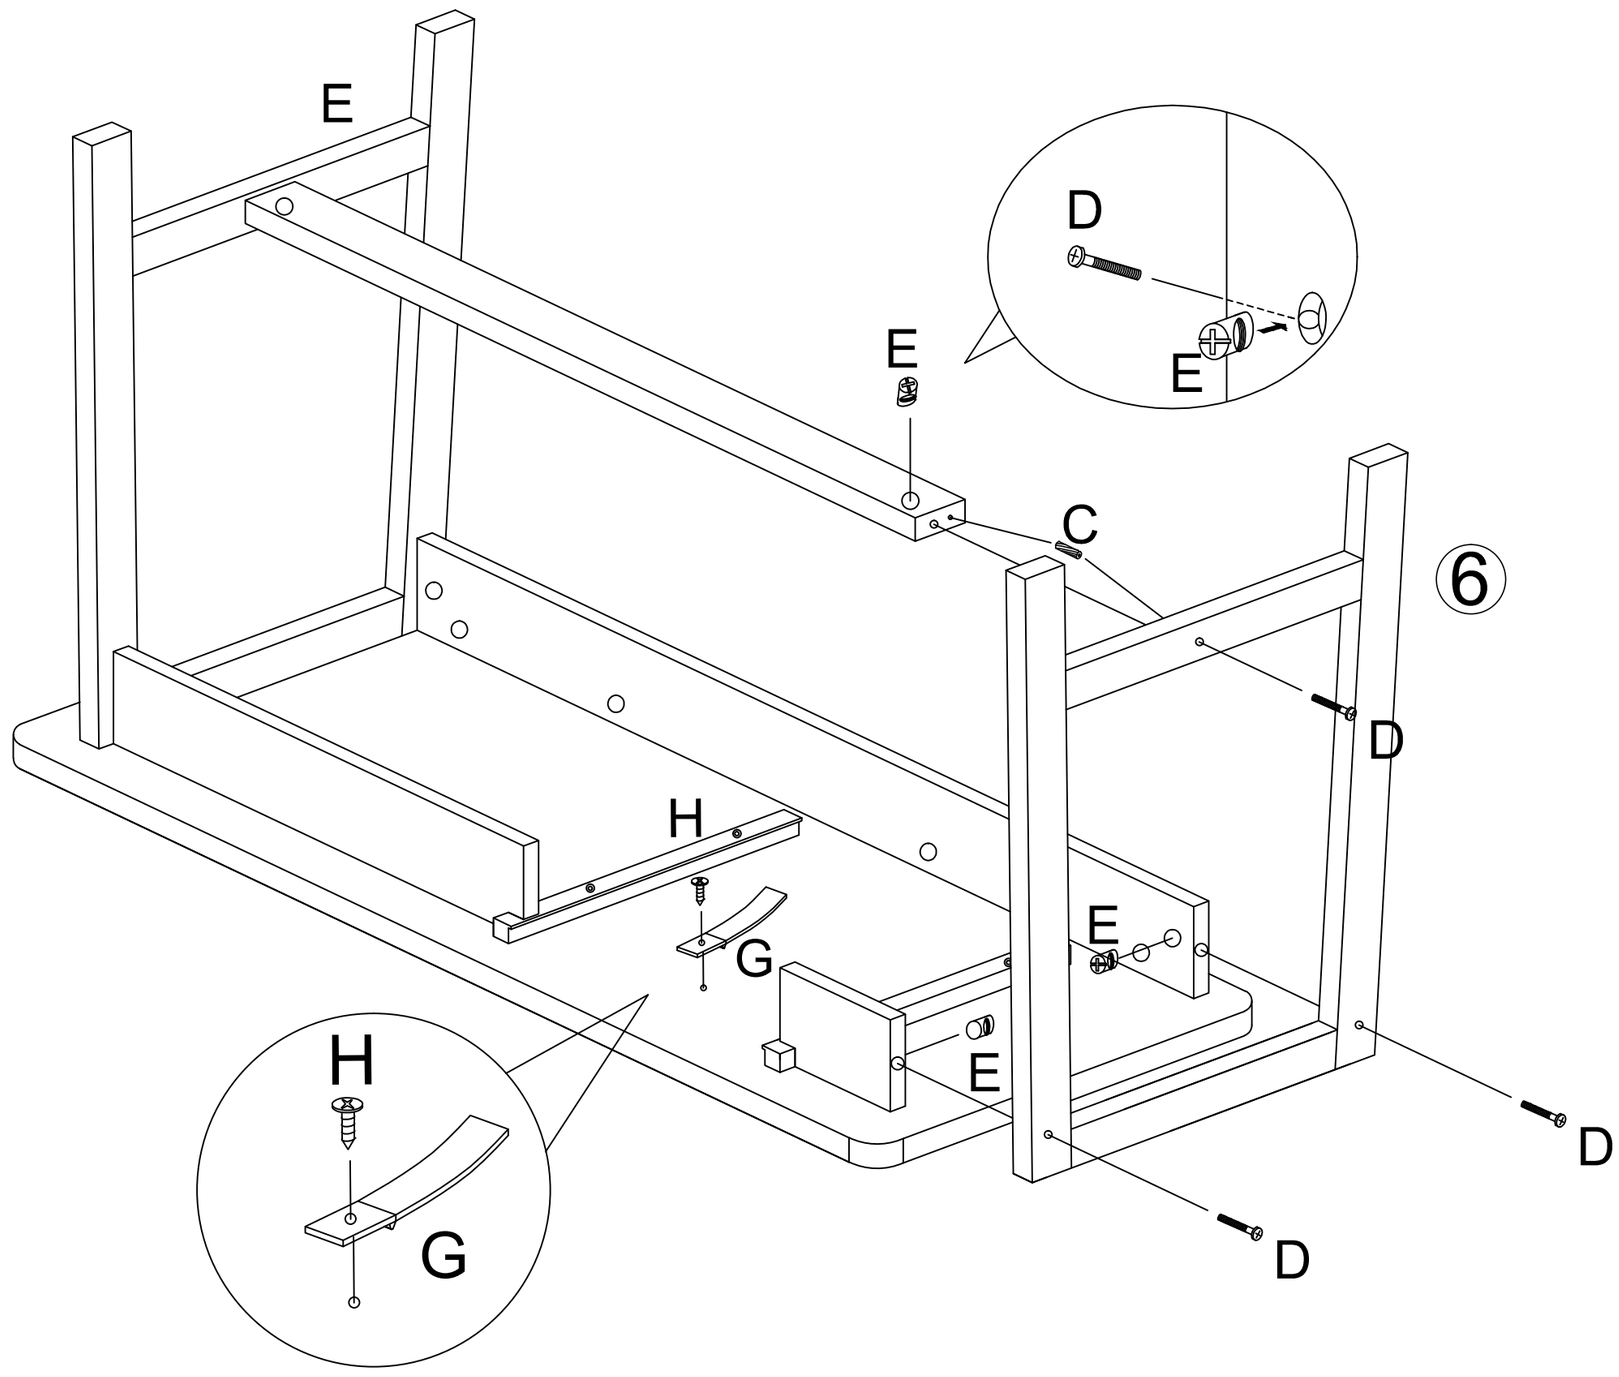

6.

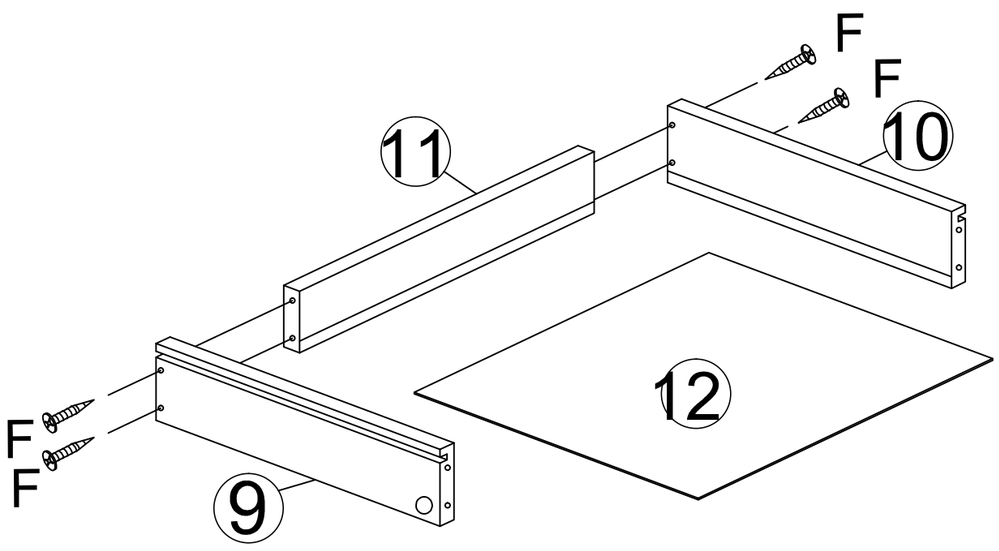

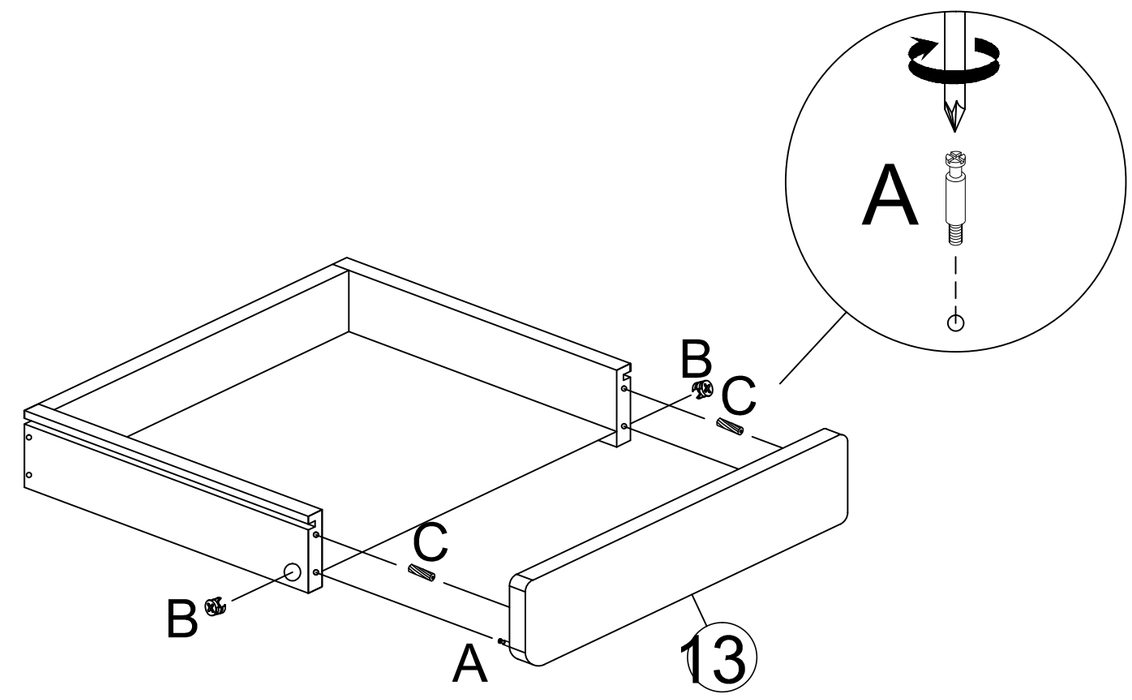

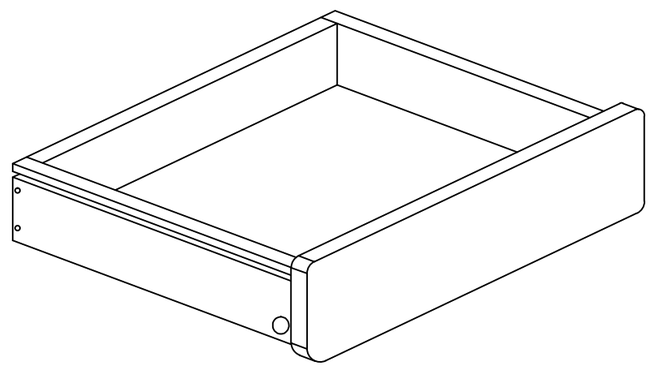

7.